


EXPLODED VIEW AND PARTS LIST

MODEL: CN100B

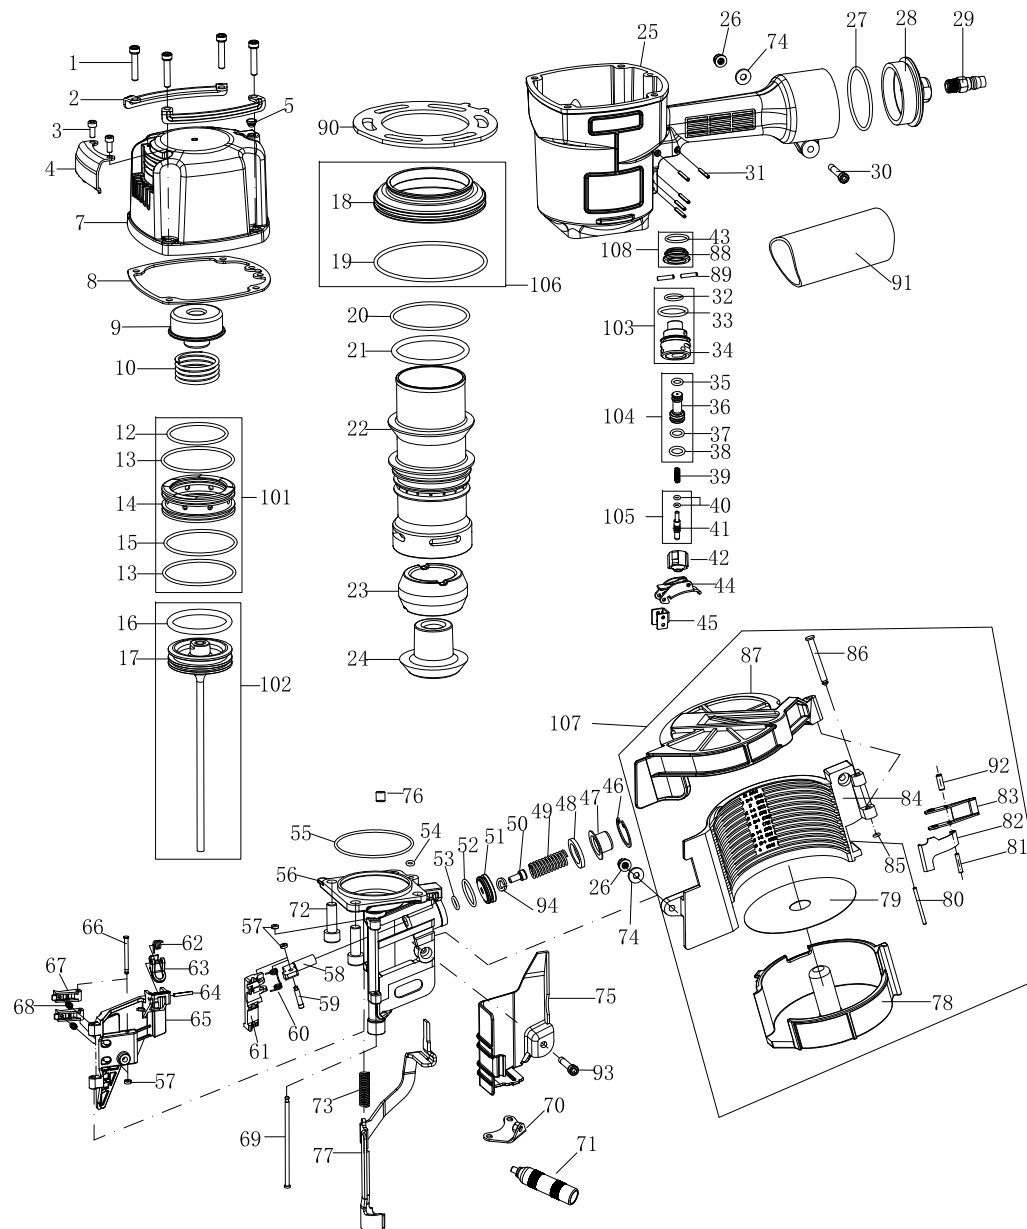

ITEM	PART NO.	PART NAME	Q' TY	ITEM	PART NO.	PART NAME	Q' TY
1	B01-01-060350-02	SCREW	4	54	B08-007500180	O-RING	1
2	AA57B-014A	PROTECTOR	2	55	B08-076000250	O-RING	1
3	B01-01-050120-02	SCREW	2	56	AA57B-002A	MUZZLE	1
4	AA57B-009A	EXHAUST COVER	1	57	AA40A-054A	RUBBER JACKER	3
5	AA57B-028A	DUST COVER	1	58	AA57A-027A	PISTON SPRING	1
7	AA57B-Y12A1	CYLINDER CAP	1	59	AA40A-032A	PIN	1
8	AA57B-007A	SHIM	1	▲60	AA57A-010A	SPRING	1
9	AA57B-006A	AIRPROOF CUSHION	1	61	AA57A-028A	FEED PAWL	1
▲10	AA57B-013A	SPRING	1	62	AA57B-029A	SPRING	1
▲12	B08-056500310	O-RING	1	63	AA57B-021A	DOOR FASTENER	1
▲13	B08-068800305	O-RING	2	64	B02-030200-02	SPRING PIN	1
14	AA57B-010A	ACTIVE VALVE	1	65	AA57B-003A	DOOR	1
15	B08-065000355	O-RING	1	66	AA57B-027A	PIN	1
▲16	B08-055600570	O-RING	1	67	AA42A-028A	CHECK PAWL	2
▲17	AA57B-Y05A1	DRIVER	1	68	AA40A-055A	SPRING	2
18	AA57B-016A	CYLINDER RETAINER	1	69	AA57B-023A	PIN	1
19	B08-107540353	O-RING	1	70	AA57B-Y11A1	GRIPER LINKER	1
20	B08-074400310	O-RING	1	71	AA57B-Y13A1	GRIPER	1
21	B08-069000530	O-RING	1	72	B01-01-100300-02-NL	SCREW	4
22	AA57B-015A	CYLINDER	1	73	AA57A-021A	SPRING	1
▲23	AA57B-018A	BUMPER I	1	74	AA40A-056A	FLAT WASHER	2
▲24	AA57B-017A	BUMPER II	1	75	AA57B-024A	MUZZLE COVER	1
25	AA57B-001A	BODY	1	76	B01-04-050050-02	SCREW	1
26	B07-01-060-00	LOCKNUT	2	77	AA57B-025A	SAFETY	1
27	B08-057000300	O-RING	1	78	AA42A-030A	NAIL SUPPORT	1
28	AA76A-023A	TAIL CAP	1	79	AA42A-039A	METAL GASKET	1
29	AK01A-023A	AIR PLUG	1	80	B02-030420-02	ROLL PIN	1
30	B01-01-060350-02	SCREW	1	81	B02-030160-02	ROLL PIN	1
31	B02-030250-02	ROLL PIN	5	82	AA42A-033A	FASTENER	
32	B08-011800180	O-RING	1	83	AA42A-034A	FASTENER SEAT	
33	B08-019600240	O-RING	1	84	AA57B-022A	MAGAZINE	1
34	AA42A-042A	VALVE SLEEVE	1	85	B08-003500200	O-RING	1
▲35	B08-005800190-10	O-RING	1	86	AA42A-032A	MAGAZINE PIN	1
36	AA17D-006A	VALVE	1	87	AA57B-030A	MAGAZINE COVER	1
▲37	B08-005800190-10	O-RING	1	88	AA40A-039A	TRIGGER COVER	1
▲38	B08-008800190	O-RING	1	89	AA42A-043A	TRIGGER PIN	2
39	AA40A-062A	SPRING	1	90	AA57B-031A	SHIM	1
▲40	B08-002500140-02	O-RING	2	91	GG08A	JACKET	1
41	AA17D-007A	THIMBLE	1	92	AA42A-036A	SLEEVE	1
42	AA42A-041A	THIMBLE COVER	1	93	B01-01-060300-02	SCREW	1
43	B08-016000180	O-RING	1	94	B04-01-060-02	SPRING WASHER	1
44	AA40A-Y14A1	TRIGGER	1				
45	AA42A-019A	SAFETY LIMITR	1				
46	B03-05-0320-02	CIRCLIP	1	101	AA57B-Y02A1	ACTIVE VALVE SET	
47	AA57A-030A	FEED PISTON BAFFLE	1	102	AA57B-Y06A1	DRIVER SET	
48	AA57A-029A	FEED PISTON STOP	1	103	AA42A-Y14A1	VALVE SLEEVE SET	
49	AA57A-031A	SPRING	1	104	AA17D-Y05A1	VALVE SET	
50	B01-01-060160-02-NL	SCREW	1	105	AA17D-Y06A1	THIMBLE SET	
51	AA57A-026A	PISTON	1	106	AA57B-Y04A1	CYLINDER RING SET	
▲52	B08-025070262	O-RING	1	107	AA57B-Y10A1	MAGAZINE SET	
▲53	B08-009800240	O-RING	1	108	AA40A-Y15A1	VALVE SET	

Remark: Items with “▲” are vulnerable parts

GBA57B00301

B2